

# DIY Birdhouse

With CAMI—General Motors



**You will need:**



**One (1) 8ft board x 6 inches wide x 1 inch thick**


**\*Pre-cut your piece of wood into the following pieces:**

**1 x 17 inches – back**

**1 x 11 inches – front**

**2 x 11 inches (with a 15 degree slant) – sides**

**1 x 9.75 inches - door**

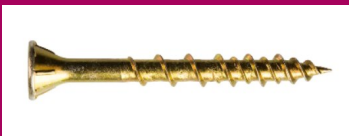

**14 screws (1.75 inches long)**



**Drill**